

ROHM Solution Simulator

Low Offset & Low Noise Rail-to-Rail Input/Output High Speed CMOS Operational Amplifiers

TLR728G-LB – Voltage Follower – Frequency Response simulation

This circuit simulates the frequency response with Op-Amp as a voltage follower. You can observe the AC gain and phase of the ratio of output to input voltage when the input source voltage AC frequency is changed. You can customize the parameters of the components shown in blue, such as VSOURCE, or peripheral components, and simulate the voltage follower with the desired operating condition.

You can simulate the circuit in the published application note: Operational amplifier, Comparator (Tutorial). [JP] [EN] [CN] [KR]


General Cautions

Caution 1: The values from the simulation results are not guaranteed. Please use these results as a guide for your design. *Caution 2:* These model characteristics are specifically at Ta=25°C. Thus, the simulation result with temperature variances may significantly differ from the result with the one done at actual application board (actual measurement).

Caution 3: Please refer to the Application note of Op-Amps for details of the technical information.

Caution 4: The characteristics may change depending on the actual board design and ROHM strongly recommend to double check those characteristics with actual board where the chips will be mounted on.

1 Simulation Schematic

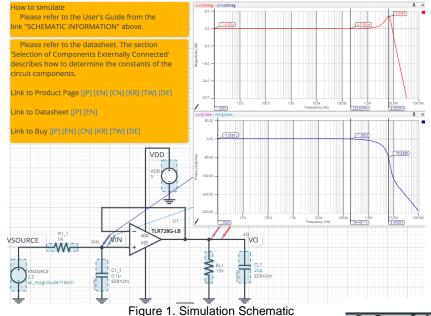

2 How to simulate

The simulation settings, such as parameter sweep or convergence options, are configurable from the 'Simulation Settings' shown in Figure 2, and Table 1 shows the default setup of the simulation.

In case of simulation convergence issue, you can change advanced options to solve. The temperature is set to 27 °C in the default statement in 'Manual Options'. You can modify it.



Table 1. Simula	ation sattings	default setun	

Figure 2. Simulation Settings and execution

Parameters	Default	Note
Simulation Type	Frequency-Domain	Do not change Simulation Type
Start Frequency	0 Hz	Simulate the frequency response for the
End Frequency	100Meg Hz	frequency range from 0 Hz to 100 MHz.
Advanced options	Simulation Resolution	1e-7
Advanced options	Convergence Assist	-
Manual Options	.temp 27	-

3 Simulation Conditions

Table 2. List of the simulation condition parameters

Tuno	Parameters	Default	Variable Range		Units
туре		Value	Min	Max	Units
	Voltage_level	2.5	0	5.5	V
Voltage Source	AC_magnitude	180m	free		V
	AC_phase	0.0	fixed		0
Valtaga Sauraa	Voltage_level	5	2.5 ^(Note1)	5.5 ^(Note1)	V
for Op-Amp	AC_magnitude	0.0	fixed		V
	AC_phase	0.0	fix	ed	0
	Voltage Source	Voltage Source Voltage_level Voltage Source AC_magnitude Voltage Source AC_phase Voltage Source Voltage_level AC_magnitude AC_magnitude	Type Parameters Value Voltage Source Voltage_level 2.5 Voltage Source AC_magnitude 180m Voltage Source Voltage_level 5 Voltage Source AC_magnitude 0.0 Voltage Source For Op-Amp AC_magnitude 0.0	TypeParametersValueMinVoltage SourceVoltage_level2.50AC_magnitude180mfreeAC_phase0.0fixVoltage Source for Op-AmpVoltage_level52.5(Note1)AC_magnitude0.0fixAC_phase0.0fixAC_phase0.0fixAC_phase0.0fixAC_phase0.0fix	Type Parameters Value Min Max Voltage Source Voltage_level 2.5 0 5.5 AC_magnitude 180m free AC_phase 0.0 fixed Voltage Source for Op-Amp Voltage_level 5 2.5 ^(Note1) AC_magnitude 0.0 fixed

(Note 1) Set it to the guaranteed operating range of the Op-Amps.

4 Op-Amp model

Table 3 shows the model pin function implemented. Note that the Op-Amp model is the behavioral model for its input/output characteristics, and neither protection circuits nor functions unrelated to the purpose are implemented.

Table 3. Op-Amp model	pins used for the simulation
-----------------------	------------------------------

Pin Name	Description	
+IN	Non-inverting input	
-IN	Inverting input	
VDD	Positive power supply	
VSS	Negative power supply / Ground	
OUT	Output	

5 Peripheral Components

5.1 Bill of Material

Table 4 shows the list of components used in the simulation schematic. Each of the capacitors has the parameters of equivalent circuit shown below. The default values of equivalent components are set to zero except for the ESR of C. You can modify the values of each component.

Туре	Instance Name	Default Value	Variable	e Range	Units	
туре	Instance Name	Delault value	Min	Max	Units	
Resistor	R1_1	0	0	10	kΩ	
Resision	RL1	10k	1k	1M, NC	Ω	
Consoitor	C1_1	0.1	0.1	22	pF	
Capacitor	CL1	25p	free	, NC	pF	

Table 4. List of ca	hasitors used	in tha	simulation	circuit
Table 4. LISCOLCA	ipacitors used	in the	Simulation	CIICUIL

5.2 Capacitor Equivalent Circuits

Property Editor	-14	×
capacitor_model_v2		
Label CL1		•
CVALUE		
25p	F	Ø
ESR		
2m	Ohm	0
ESL		
0	Н	8
USE_INITIAL_VOLT	AGE	R
INITIAL_VOLTAGE		
0.0	V	Ø

(a) Property editor

(b) Equivalent circuit

Figure 3. Capacitor property editor and equivalent circuit

The default value of ESR is $2m \Omega$.

(Note 2) These parameters can take any positive value or zero in simulation but it does not guarantee the operation of the IC in any condition. Refer to the datasheet to determine adequate value of parameters.

6 Recommended Products

6.1 Op-Amp

TLR728G-LB : Low Offset & Low Noise Rail-to-Rail Input/Output High Speed CMOS Op-Amps. [JP] [EN] [CN] [KR] [TW] [DE]

Technical Articles and Tools can be found in the Design Resources on the product web page.

	Notice
1)	The information contained in this document is intended to introduce ROHM Group (hereafter referred to asROHM) products. When using ROHM products, please verify the latest specifications or datasheets before use.
2)	ROHM products are designed and manufactured for use in general electronic equipment and applications (such as Audio Visual equipment, Office Automation equipment, telecommunication equipment, home appliances, amusement devices, etc.) or specified in the datasheets. Therefore, please contact the ROHM sales representative before using ROHM products in equipment or devices requiring extremely high reliability and whose failure or malfunction may cause danger or injury to human life or body or other serious damage (such as medical equipment, transportation, traffic, aircraft, spacecraft, nuclear power controllers, fuel control, automotive equipment including car accessories, etc. hereafter referred to as Specific Applications). Unless otherwise agreed in writing by ROHM in advance, ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties arising from the use of ROHM Products for Specific Applications.
3)	Electronic components, including semiconductors, can fail or malfunction at a certain rate. Please be sure to implement, at your own responsibilities, adequate safety measures including but not limited to fail-safe design against physical injury, and damage to any property, which a failure or malfunction of products may cause.
4)	The information contained in this document, including application circuit examples and their constants, is intended to explain the standard operation and usage of ROHM products, and is not intended to guarantee, either explicitly or implicitly, the operation of the product in the actual equipment it will be used. As a result, you are solely responsible for it, and you must exercise your own independent verification and judgment in the use of such information contained in this document. ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties arising from the use of such information.
5)	When exporting ROHM products or technologies described in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, such as the Foreign Exchange and Foreign Trade Act and the US Export Administration Regulations, and follow the necessary procedures in accordance with these provisions.
6)	The technical information and data described in this document, including typical application circuits, are examples only and are not intended to guarantee to be free from infringement of third parties intellectual property or other rights. ROHM does not grant any license, express or implied, to implement, use, or exploit any intellectual property or other rights owned or controlled by ROHM or any third parties with respect to the information contained herein.
7)	No part of this document may be reprinted or reproduced in any form by any means without the prior written consent of ROHM.
8)	All information contained in this document is current as of the date of publication and subject to change without notice. Before purchasing or using ROHM products, please confirm the latest information with the ROHM sales representative.
9)	ROHM does not warrant that the information contained herein is error-free. ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties resulting from errors contained in this document.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

https://www.rohm.com/contactus