(B-009-D) DC-AC 3-phase 2-Level Motor Driver (Discrete)

PLECS Reference Circuit
Circuit Information

2026 March
68UG128E Rev.001

Simulation Parameters

	Name	Content	unit	Default Value	Variable Range
Controller	fs	Switching Frequency	kHz	10	1~ 1000
	DT	Dead time	ns	1000	100 ~100000
	M	Modulation Factor	-	0.8	0.1~1
	V_dc	Input Voltage	V	600	100~1200
	Thcap	Thermal Capacitance ※	J/K	0.1	1m ～ 100
	Rth	Thermal Resistance ※	K/W	0.5	1m ～ 100
	TGND	Thermal GND Temperature	℃	25	-40 ～ 175

Name	Content	Unit	Default Value	Variable Range
Test_time	Test time in simulation	s	0.5	100μ ～ 0.5
Iout(peak)	Output Current (peak)	A	15	1~1000
fr	Output Frequency	Hz	50	50 ～ 1M
PF	Power Factor	-	0.9	1m～1
Rg_on※	Gate Resistance (Source) ※	Ω	6.8	0.1 ～ 100
Rg_off※	Gate Resistance (Sink) ※	Ω	6.8	0.1 ～ 100
T_init	Initial Junction Temperature	℃	25	-40 ～ 175

※This setting is common to the U-V-W phases.

Simulation Circuit

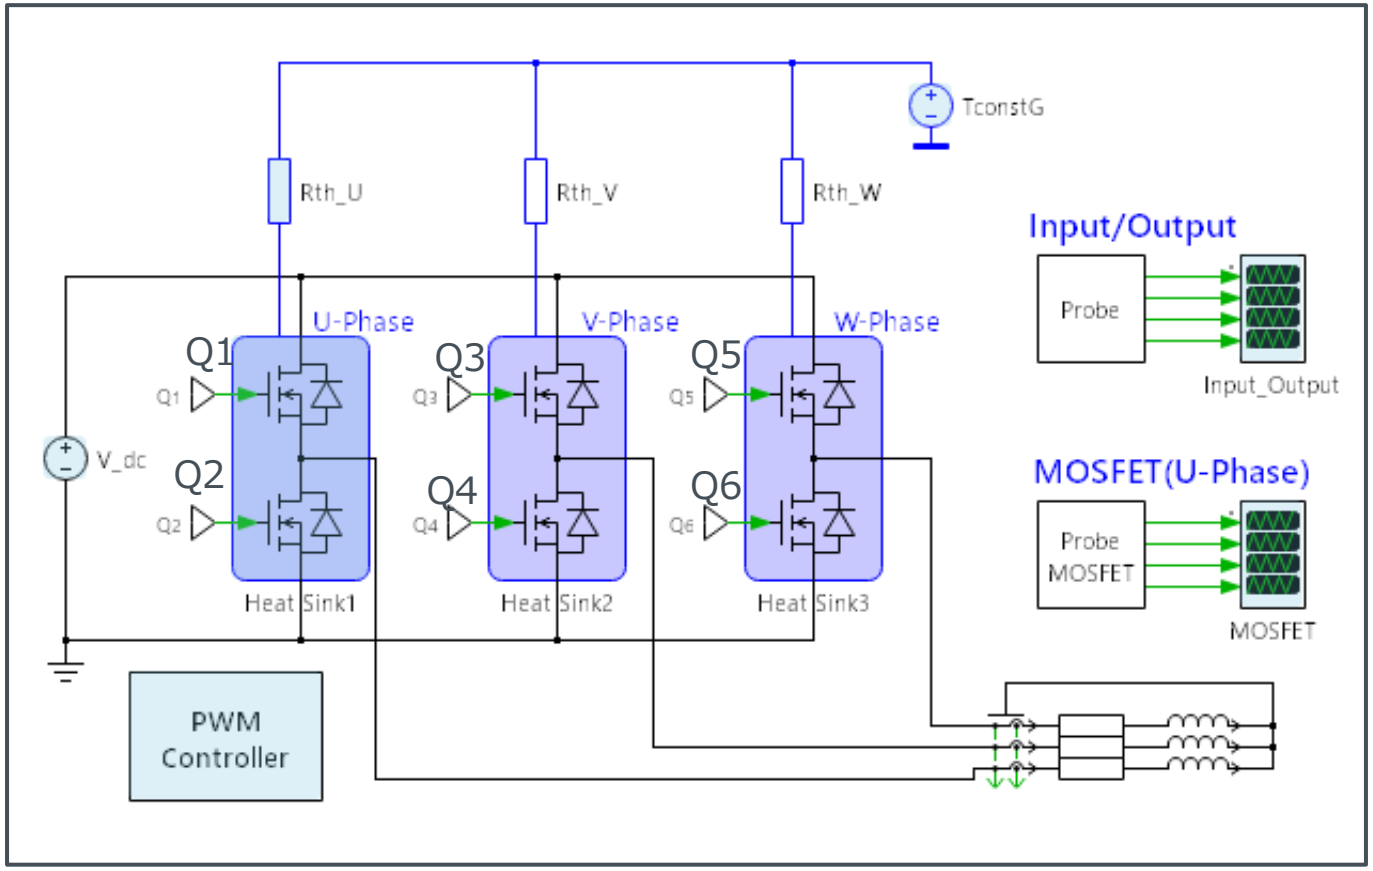

Default Devices

Name	Device Type	Part No.	Specification
Q1～Q6	SiC MOSFET	SCT4065DR	750V/65mΩ/TO-247-4L

Simulation Screen Overview

2026 March
68UG128E Rev.001

Schematic window

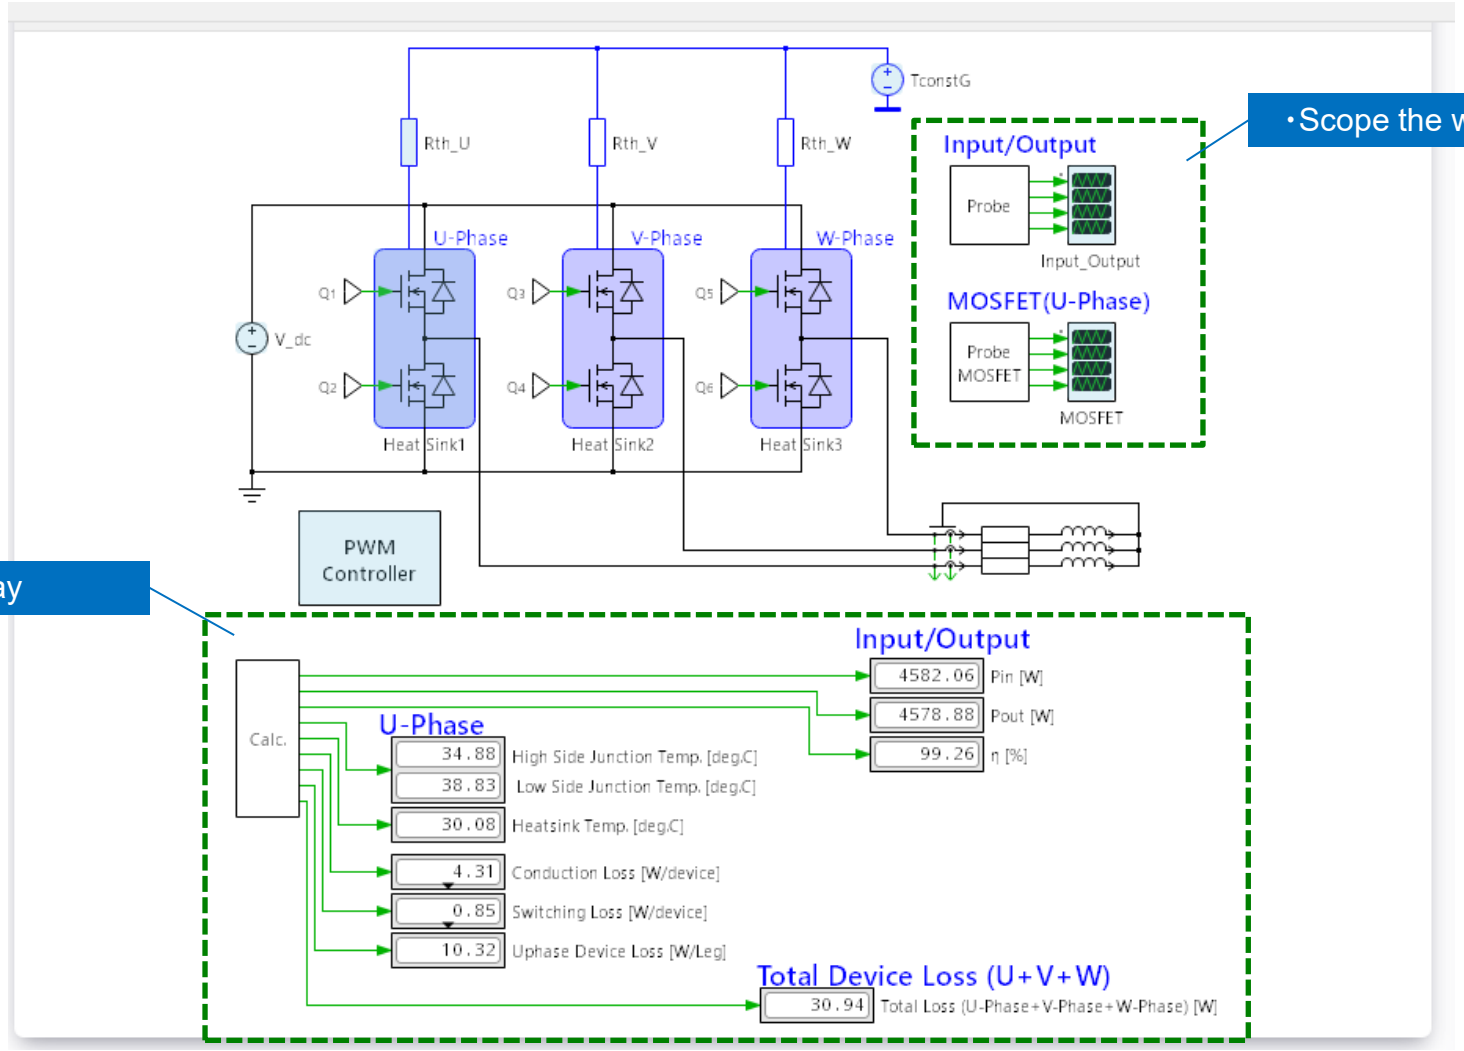

・Scope the waveform

・Results display

Simulation Results

2026 March
68UG128E Rev.001

Input and Output

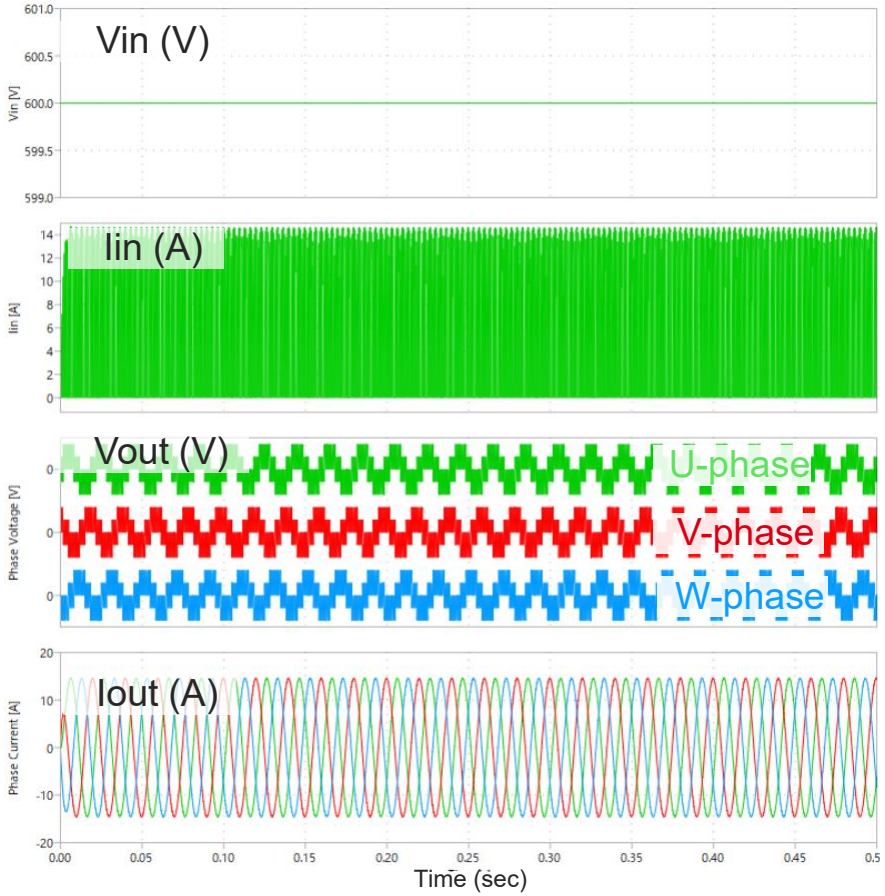

Contents	Results
Input Power : Pin	4.582 (kW)
Output Power: Pout	4.579 (kW)
Efficiency: η	99.26 (%)

U-Phase

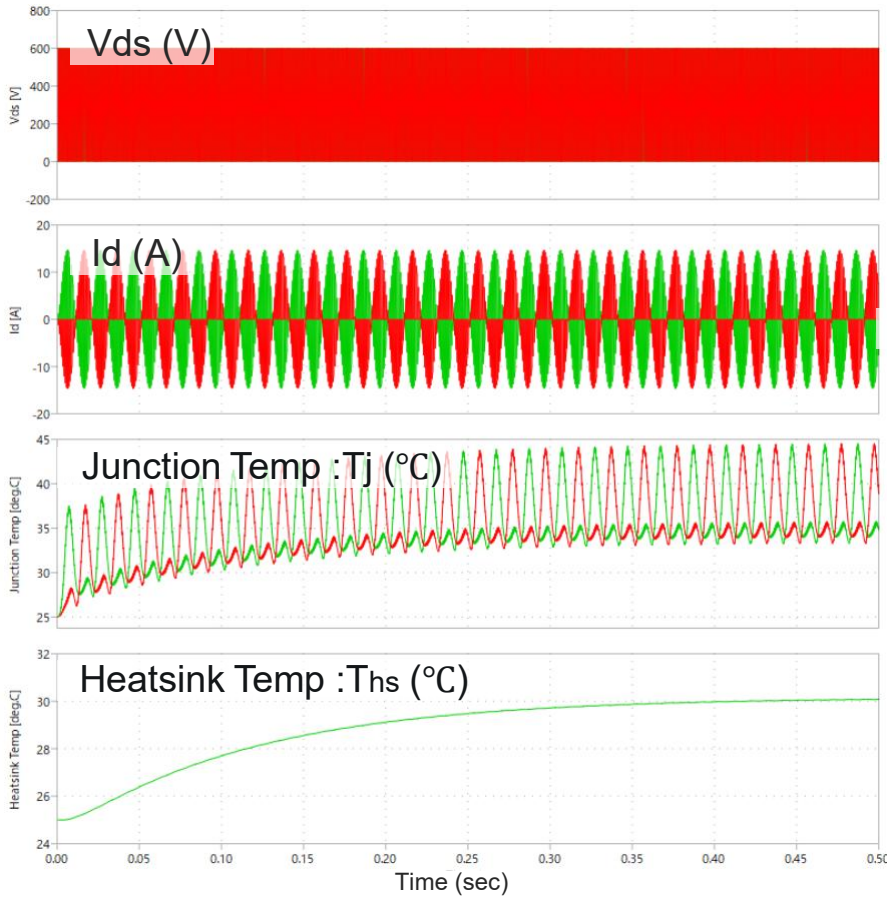

Contents	Results
U-phase Device Loss	10.72 (W/Leg)
Total Device Loss(U+V+W)	32.17 (℃)

Contents	Results
Junction Temp: Tj (HS)	34.88 (℃)
Junction Temp: Tj (LS)	38.83 (℃)
Heatsink Temp: Ths	30.08 (℃)
Conduction Loss: Pcond (HS)	4.31 (W/ device)
Switching Loss: Psw (HS)	0.85 (W/ device)

2026 March
68UG128E Rev.001

To run this PLECS Reference Circuit, you must have the "PLECS" simulation software installed on your computer.

1. Obtaining the Software

If you do not have PLECS installed, please download the installer from the official website and complete the setup process.

https://www.plexim.com/download

2. Licensing (Using Demo Mode)

This reference circuit can be executed and viewed in "Demo Mode" even if you do not possess a paid license.

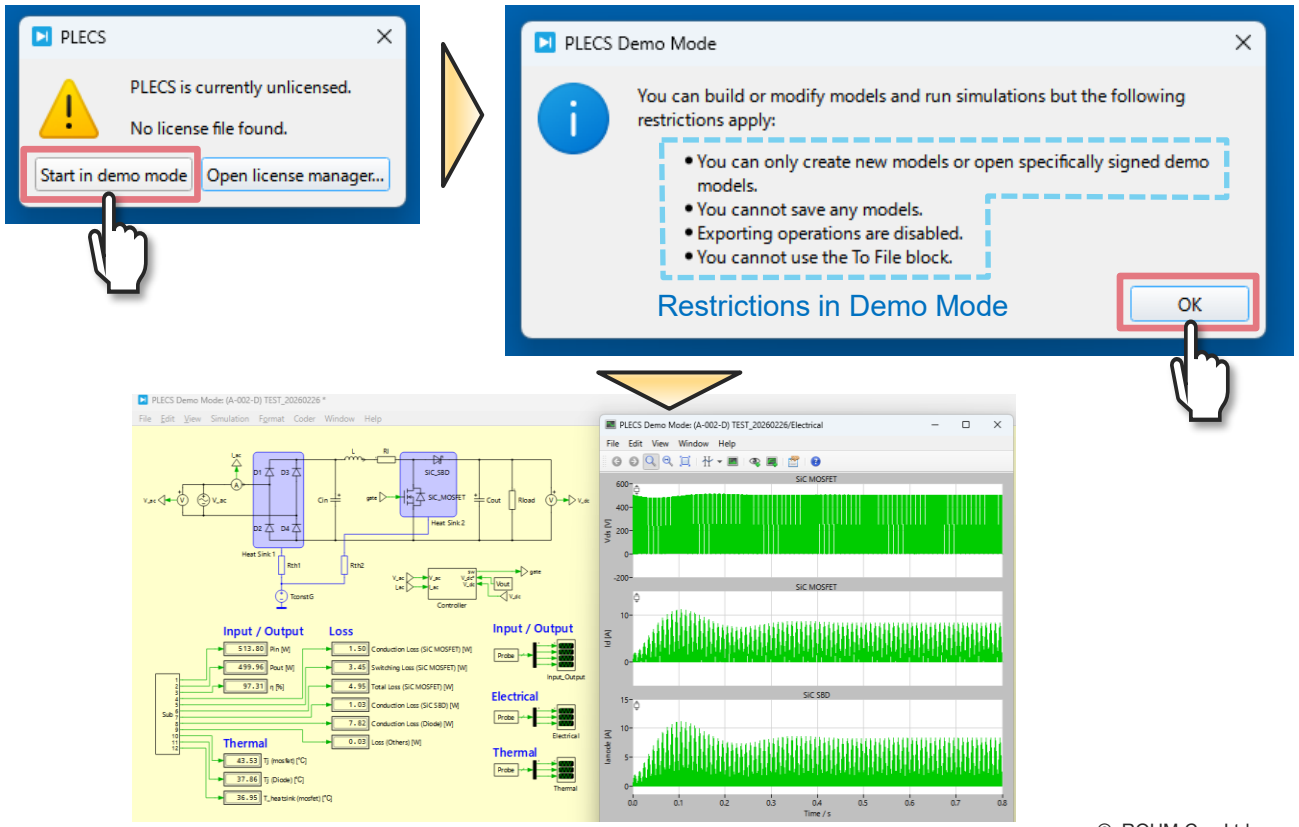

How to change the devices

2026 March
68UG128E Rev.001

Schematic window

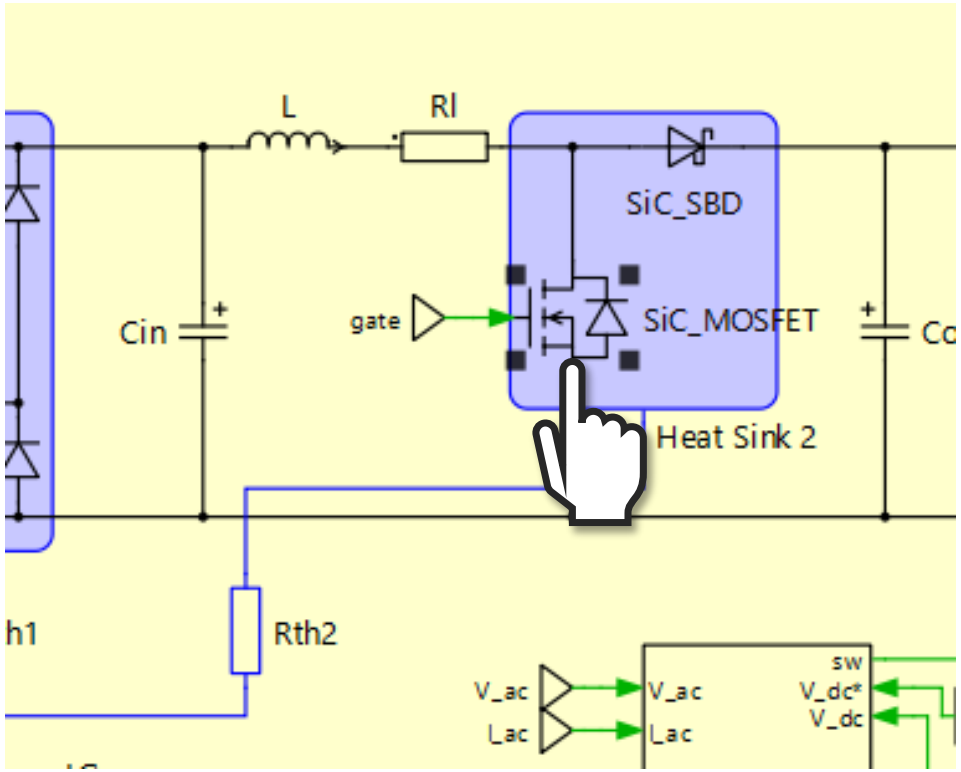

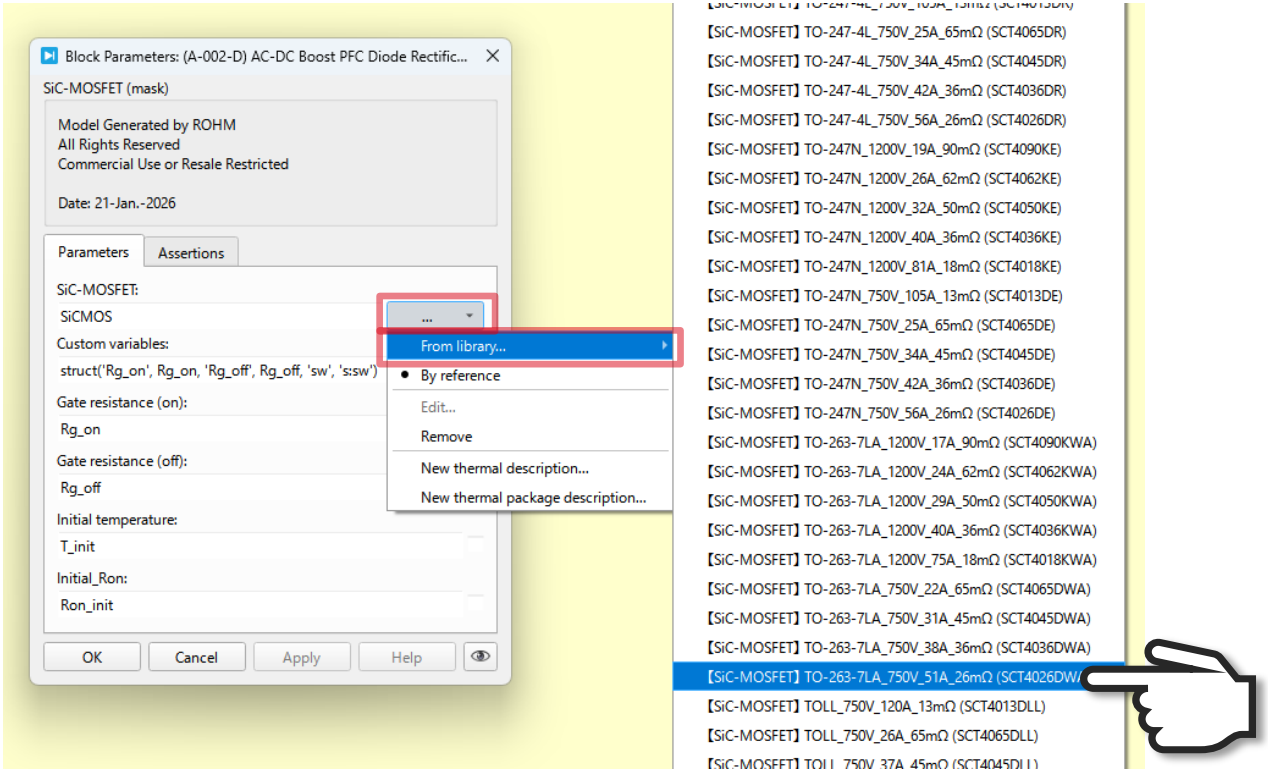

Hover your mouse cursor over the device symbol that you want to change and double-click the left button of the mouse.

Click "..." > "From library..." to view the list of available devices and you can select a favorite device from these.

If the model you need is not in the list, please refer to the application note "How to Use PLECS Models".

How to change the simulation parameters

2026 March
68UG128E Rev.001

Schematic window

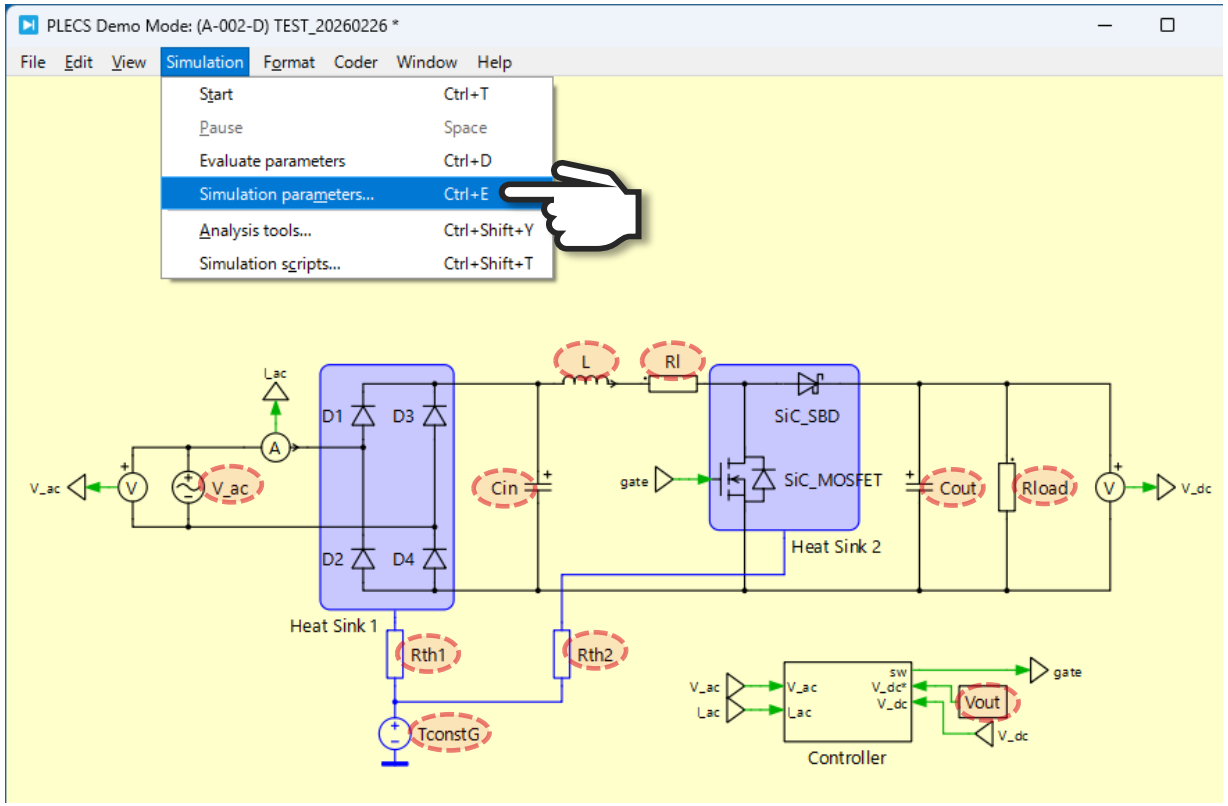

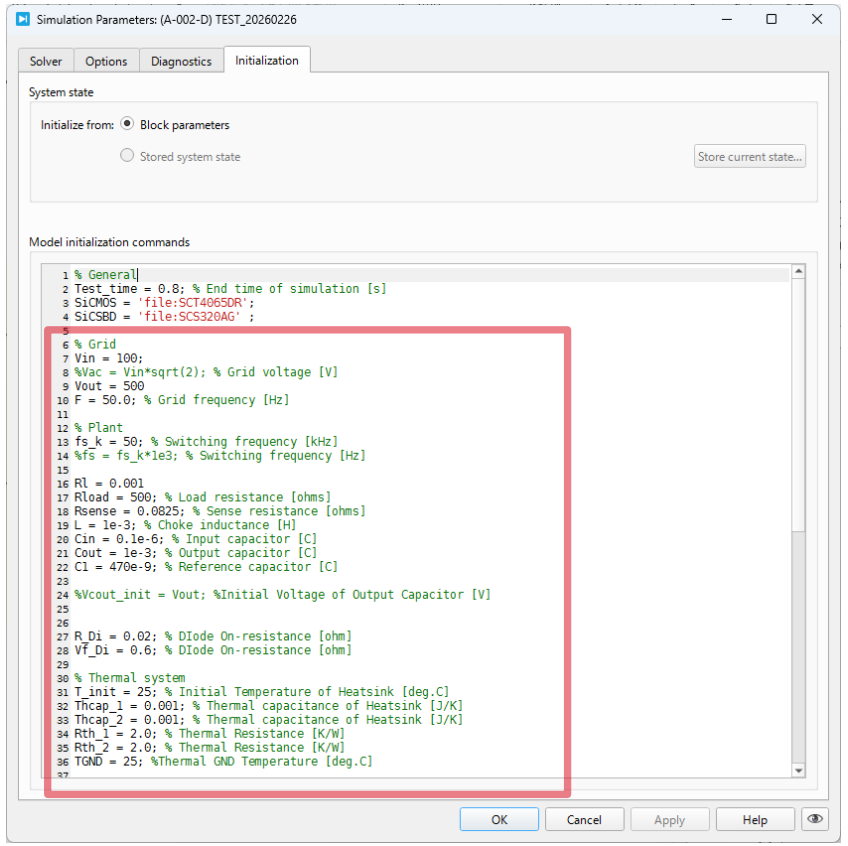

All simulation parameters are parameterized. To modify them, go to the menu, select “Simulation parameters...” , and edit the values within "Model initialization commands."

Notice

1) The information contained in this document is intended to introduce ROHM Group (hereafter referred to asROHM) products. When using ROHM products, please verify the latest specifications or datasheets before use.

2) ROHM products are designed and manufactured for use in general electronic equipment and applications (such as Audio Visual equipment, Office Automation equipment, telecommunication equipment, home appliances, amusement devices, etc.) or specified in the datasheets. Therefore, please contact the ROHM sales representative before using ROHM products in equipment or devices requiring extremely high reliability and whose failure or malfunction may cause danger or injury to human life or body or other serious damage (such as medical equipment, transportation, traffic, aircraft, spacecraft, nuclear power controllers, fuel control, automotive equipment including car accessories, etc. hereafter referred to as Specific Applications). Unless otherwise agreed in writing by ROHM in advance, ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties arising from the use of ROHM Products for Specific Applications.

3) Electronic components, including semiconductors, can fail or malfunction at a certain rate. Please be sure to implement, at your own responsibilities, adequate safety measures including but not limited to fail-safe design against physical injury, and damage to any property, which a failure or malfunction of products may cause.

4) The information contained in this document, including application circuit examples and their constants, is intended to explain the standard operation and usage of ROHM products, and is not intended to guarantee, either explicitly or implicitly, the operation of the product in the actual equipment it will be used. As a result, you are solely responsible for it, and you must exercise your own independent verification and judgment in the use of such information contained in this document. ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties arising from the use of such information.

5) When exporting ROHM products or technologies described in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, such as the Foreign Exchange and Foreign Trade Act and the US Export Administration Regulations, and follow the necessary procedures in accordance with these provisions.

6) The technical information and data described in this document, including typical application circuits, are examples only and are not intended to guarantee to be free from infringement of third parties intellectual property or other rights. ROHM does not grant any license, express or implied, to implement, use, or exploit any intellectual property or other rights owned or controlled by ROHM or any third parties with respect to the information contained herein.

7) No part of this document may be reprinted or reproduced in any form by any means without the prior written consent of ROHM.

8) All information contained in this document is current as of the date of publication and subject to change without notice. Before purchasing or using ROHM products, please confirm the latest information with the ROHM sales representative.

9) ROHM does not warrant that the information contained herein is error-free. ROHM shall not be in any way responsible or liable for any damages, expenses, or losses incurred by you or third parties resulting from errors contained in this document.

ROHM SEMICONDUCTOR

Thank you for your accessing to ROHM product informations.
More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

https://www.rohm.com/contactus